

STEELMATE®
Automotive

TIRE INFLATOR

A must have in car



PO3

ATTENTION! Read all instructions carefully
Failure to follow warning instructions can result in fire, personal injury or property damage.

Think safety think Steelmate

STEELMATE CO., LTD.

Steelmate Industrial Park, Heping Street, Dongfu Road, Dongfeng Town,
Zhongshan City, Guangdong, P.R. China 528425



PPI0414R/A

- Voltage too low, check condition of vehicle's battery.
- Overheated from excessive use, shut it off and allow to cool for 30 minutes.
- 3. Inflator runs slowly:**
 - Check hose for break and leak at fitting.
 - Check tire for leaks.
 - Be sure the air hose connector is tightly screwed onto the valve stem.
- 2. Inflator runs but does not inflate:**
 - remove fuse and inspect.
 - Please ask qualified electrician to fix it, unscrew the tip of the plug adaptor.
 - The fuse, located in the plug adaptor, may have blown.
- 1. Inflator fails to operate when plugged in:**

Troubleshooting

Note: Recommended air pressure for sedan: 2.2~2.8Bar/ 30~40 PSI


1 Vehicle powered on and put the plug into cigarette lighter.

2 Screw air hose connector to tire's valve stem.

3 Press the switch on and start to inflate.

4 When proper pressure is reached, press the switch off and remove the inflator.

USAGE

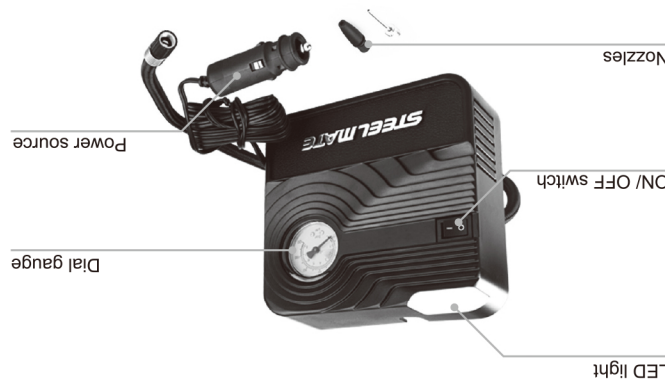

BRIEF LOOK